


## The disinfection tunnel for protection against viruses, bacteria and fungi

**The way the disinfection tunnel works is reminiscent of the body scanner at the airport:** The person enters the tunnel and stops with outstretched arms. The disinfectant is sprayed through nozzles to form a fine mist of water which is deposited on all surfaces in the tunnel – skin and clothing, bags or even smartphones. The use of the tunnel is very simple and in detail like this:

1. Enter the DisinfectTunnel and let yourself be sprayed with outstretched arms
2. Turn 90° (always keep your arms outstretched)
3. Then hold your shoe soles in front of the nozzle
4. Hold other objects such as handbags, keys, smartphones, etc. in front of the nozzle
5. Leave the tunnel

**RESULT:** The disinfection process is completed within 15 seconds, but the effect lasts up to 24 hours.

The disinfectant used is automatically added to the water by the dosing pump and kills viruses, bacteria and fungi quickly and easily, while being harmless to people and the environment.

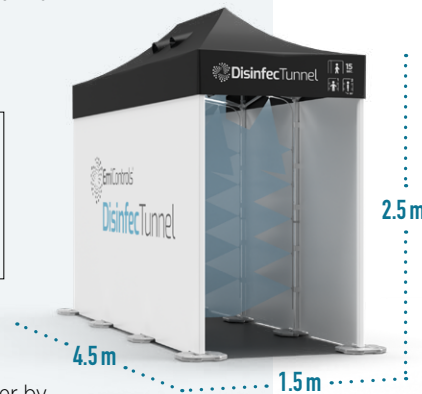

### TECHNICAL DATA: TUNNEL AND PUMP BOX

- > Standard measurements: 4500 mm (L) x 2500 mm (H) x 1500 mm (W) – can be adapted on request
- > Folding tent with aluminium structure
- > Waterproof and robust tarpaulin
- > Preassembled stainless-steel nozzle line
- > Assembly time approx. 15 minutes
- > Light
- > Floor optionally available

### The external and robust pump box in galvanized steel, contains:

- > switch cabinet with light barrier and time relay
- > high-pressure pump (70 bar)
- > automatic dosing pump
- > holder for 12 l canister (for disinfectant)
- > Water filter
- > Dimensions of the box: 850 mm (L) x 730 mm (W) x 600 mm (H)

### ELECTRICAL

Nominal voltage	V	220
Frequency	Hz	50
Rating	kW	1.6

### WEIGHT

Pump box only	kg	65
---------------	----	----

### WATER

Water inlet pressure	bar	1-4
Water flow rate	l/min	0.5